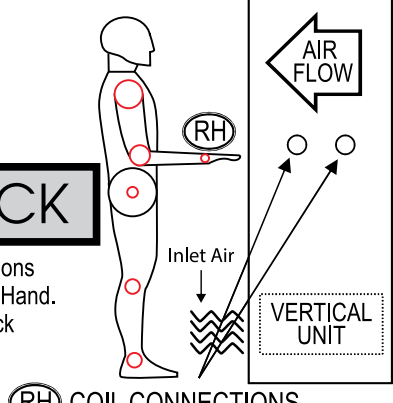
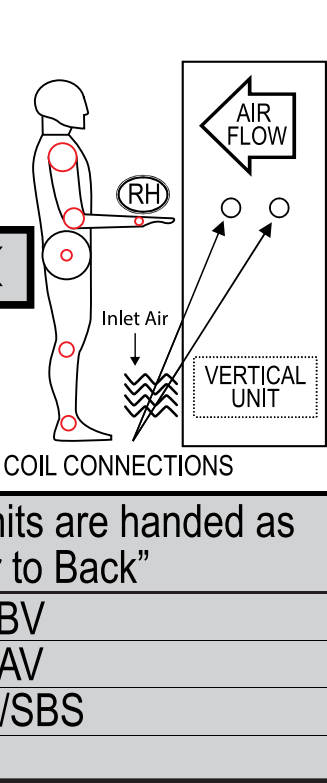


# COIL/UNIT HANDING GUIDE

 <p><b>AIR to BACK</b></p> <p>Unit and coil connections shown above are Right Hand. (RH) Inlet air to back</p> <p>(RH) COIL CONNECTIONS</p>	 <p>(LH) COIL CONNECTIONS</p> <p><b>AIR to BACK</b></p> <p>Unit and coil connections shown above are Left Hand. (LH) Inlet air to back</p>
<p>Vertical Largo Units are handed as "Inlet Air to Back"</p>	<p>Horizontal Largo Units are handed as "Inlet Air to Back"</p>
<p>RBV</p>	<p>RAH</p>
<p>RAV</p>	<p>RBH</p>
<p>SSL/SBS</p>	<p>SBH/SBV</p>
	<p>SBM</p>

**Note:** The industry standard to determine handing of an HVAC unit is with Inlet Air to Back.